


Wifi-Link updating procedure from 3.0.0 version

Requirements:


- Wifi-Link
- 1x Stright cable (supplied with the Spirit units)
- 3x wires or 3x pins
- Spirit unit
- ESP FLASH TOOL – <http://spirit-system.com/media/Wifi-Link-Repair.zip>

Procedure:


1. Connect Wifi-Link and USB interface according following photo:

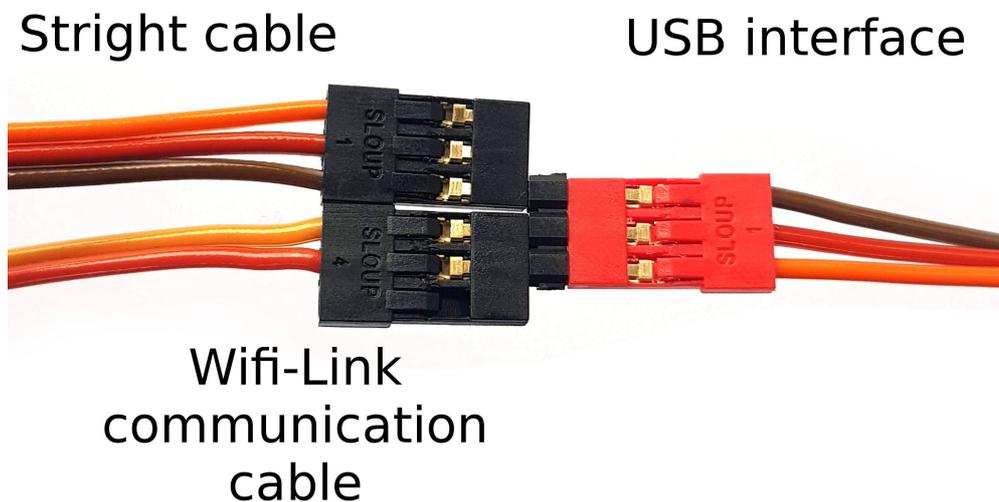

2. Connect Stright cable at a free port of the Spirit unit. (RUD, AUX, AUX2, CH0-CH4)
3. Connect Wifi-Link powering cable at a free port of the Spirit unit. (RUD, AUX, AUX2, CH0-CH4)
4. Connect two points (Blue stars at the following photo) with a conductive tweezers or other metallic tool carefully and hold connected.
5. Connect power (BEC/battery) to the Spirit unit while holding tweezers. (servos and receiver can be connected)
6. Remove tweezers, Status LED of the Wifi-Link must remain Off. (otherwise repeat from step 4)
7. Start the ESP_DOWNLOAD_TOOL_V2.4.exe software.
8. Select COM port that is normally used for Spirit unit in the software.
9. Press START button, flashing should start immediately. (Do not change any parameter of the software!)

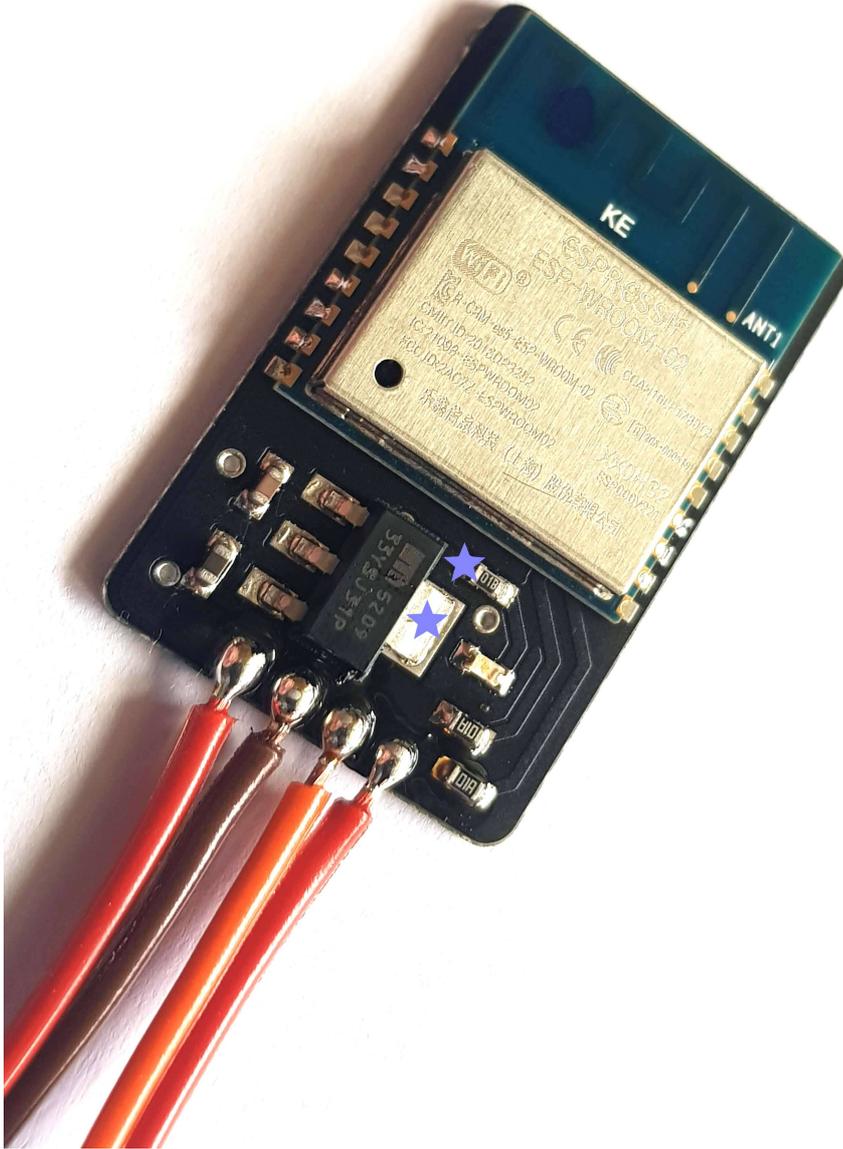

Two stars points that must be connected together

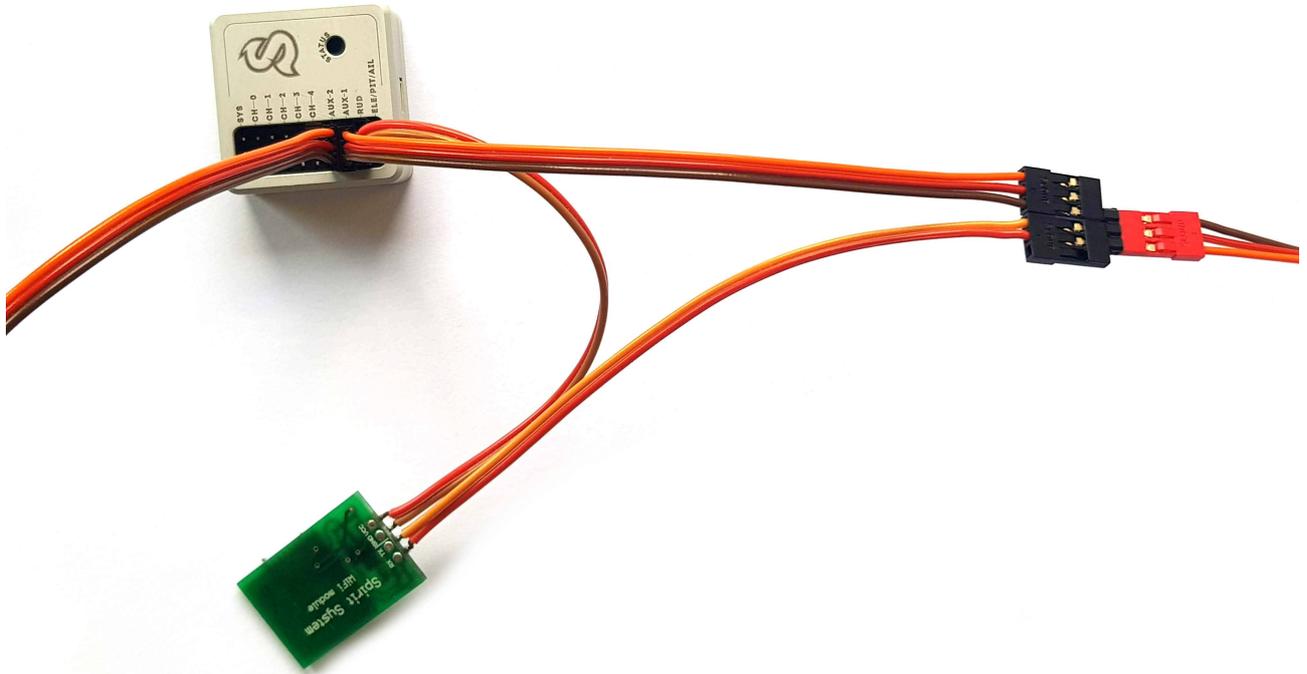

Final wiring photo – left cable for powering